Caution: When the main battery is removed, the backup battery retains RAM data in memory for 2 hours, please charge the battery for the period to avoid the data loss in RAM memory.

5. Using the SD/MMC Memory Card

a. Remove the two screws from the SD compartment cover and remove the cover.

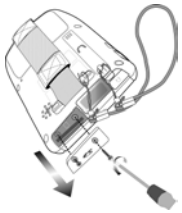

b. Insert the SD card with the notched corner as shown by the icon on the case.

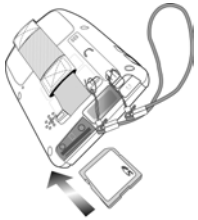

c. Push the card into the slot until you hear an audible system sound; this will signal that the card is already properly seated within the slot

6. Keypads and Function Buttons

When the Function button is pressed, an icon appears in the operating system.

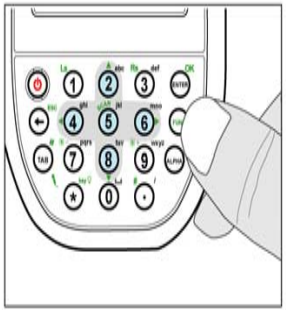

1	Power Button	10	Function Keys
2	#1. Left Soft	11	Tab. Open Windows
3	#2. abc. Up	12	#7. pqrs. Brightness
4	#3. def. Right Soft	13	#8. tuv. Down
5	Enter key. OK	14	#9. wxzv. Brightness
6	Backspace. Escape	15	Alpha
7	#4. ghi. Left	16	Asterisk. Illuminate
8	#5. jkl	17	Number 0. Spaces
9	#6. mno. Right	18	Period. Pounds

BARCODE TECHNOLOGIES

WPA1200 Quick Start Guide

© 2007 Wasp Technologies

Front Left View

1. Status Indicator
2. Left scan trigger button
3. Power button
4. Microphone
5. Universal connector
6. Keypad
7. LCD touch screen
8. Speakers

Back View

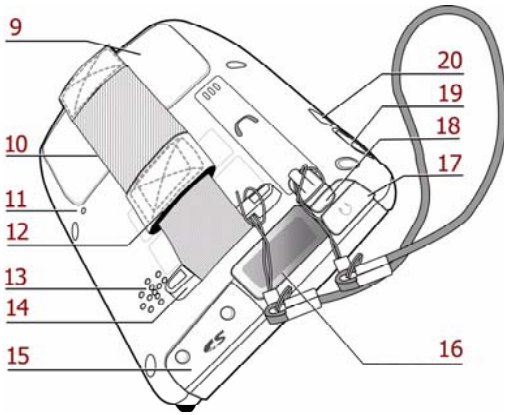

9. Battery compartment
10. Battery compartment release Latch
11. Reset button
12. Handstrap
13. Speaker
14. Strap holder
15. Memory card slot
16. Barcode scanner window
17. Earphone Jack
18. Stylus
19. Right scanner trigger button
20. Infrared (IR) Port

1. Turning the WPA1200 On for the First Time

After you have initially charged your device for about 12 hours, the device is ready to be used. You can now start up your device where you'll calibrate the display, learn some basic stylus usage, and set up the system time zone, date and time.

2. Powering On

Turn on your device by pressing the power button on the front panel. (Number 3 in the graphic above.)

3. Installing the Battery Pack

Open the battery compartment by pushing the latch in the direction of the arrow and lifting up.

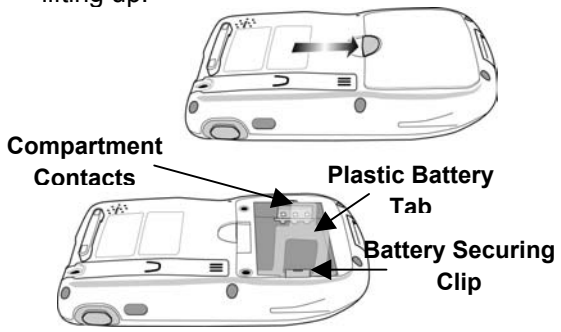

Position the battery pack, making sure the battery contacts are aligned with the contacts in the compartment and the battery is placed on top of the plastic tab, as shown in the following illustration.

Slide the battery pack into the battery bay while simultaneously pulling the plastic tab and securing clip until the battery clicks into place.

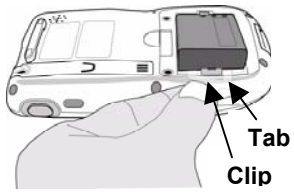

Replace the battery compartment cover.

4. Charging the Battery

a. Press and hold the connector button on the USB charging cable and connect it to the WPA1200.

b. Plug the AC adapter cable into the power jack on the USB charging cable (2).

c. Connect the AC adapter into an electrical outlet (3).